

**SIMOND
STORE**


SKU: HB-18P




FORGE FURNACE WITH HAND BLOWER

USE THIS MANUAL FOR FUTURE REFERENCE

PART LIST


<u>A</u>		<u>Blower</u>
<u>B</u>		<u>Furnace</u>
<u>C</u>		<u>Blower stand</u>
<u>D</u>		<u>Fire grate</u>
<u>E</u>		<u>Blower Handle</u>
<u>F</u>		<u>Furnace Leg</u>
<u>G</u>		<u>Pipe</u>
<u>H</u>		<u>Ash Dump Gate</u>

TOOL REQUIRED

I		<u>SPANNER</u> Included
J		<u>Screwdriver</u> Not Included

ASSEMBLY REQUIRED


- All the process where bolting is mentioned please don't fully tighten there. After completing all the process there is one step given for tighten all the bolt and screw as it relates to each other.
- Assemble Blower Stand(C) which consists of two piece.

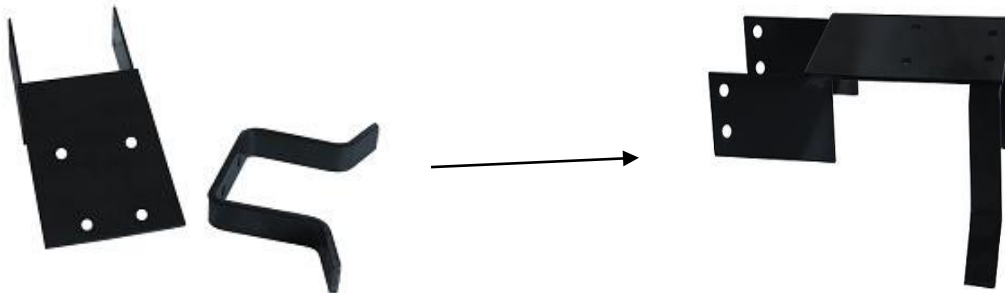

- Attach the blower handle(E) to blower(A).



- Place the furnace leg(F) into hole provided at the side furnace(B) and bolt it. There may be slight adjustment requires for alignment. After this fully tighten the bolt and nut.

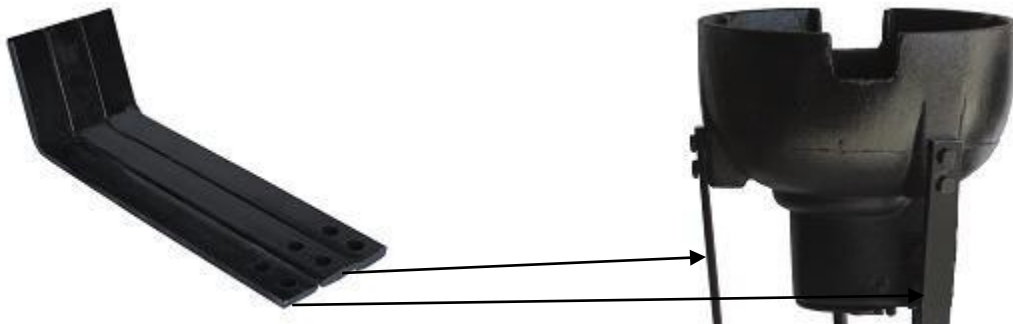

- Place the blower(A) on the blower stand(C).



- Connect the blower(A) and furnace(B) with pipe(G).
There will be two bolt fitted on blower(A). Only one is require and keep other as a replacement.



- Fit Ash dump gate(H) at the bottom of furnace(B).
- Now tighten all the bolt. Ensure the bolts aren't overturned or tightened more often than necessary.

***NOTE:** Wear all safety instrument while assembling.

Please visit www.simondstore.com for more product.